



**MacDermid  
Design Ltd**

A FULL SERVICE METAL FABRICATION COMPANY

 [www.macdesignltd.com](http://www.macdesignltd.com)

2650 E. Mohawk Lane, Suite 152, Phoenix, Arizona 85050  
Phone: 602-482-7215 Email: [info@macdesignltd.com](mailto:info@macdesignltd.com)

### VEHICLE APPLICATION

- |   |   |
|---|---|
| <ul style="list-style-type: none"><li>• 2024-2025</li></ul> | <ul style="list-style-type: none"><li>• RZR Xpedition ADV Ultimate</li><li>• RZR Xpedition ADV Ultimate 5</li><li>• RZR Xpedition ADV Northstar</li><li>• RZR Xpedition ADV Northstar 5</li></ul> |
|---|---|

### HARDWARE INCLUDED

- |                      |  |
|----------------------|--|
| (4) T-Nut M6 10MM    | (6) M6 1.16MM JIS High Strength Steel Flanged Hex Head Screw |
| (2) M6 x 1 Nut Plate | (1) Rear Window Molle Panel                                  |

### TOOL LIST

- |  |
|--|
| <ul style="list-style-type: none"><li>• 10mm Socket/Wrench</li></ul> |
|--|

### INSTALLATION NOTES

\*\*\*READ ALL INSTRUCTIONS FROM START TO FINISH BEFORE BEGINNING INSTALLATION. FAILURE TO DO SO MAY RESULT IN DAMAGE TO PRODUCT\*\*\*

\*\*\*LID OF STORAGE BOX IS SPRING LOADED FOR AN ADDITIONAL 75LBS. DO NOT OPEN LID UNLOADED WITHOUT APPLYING DOWNWARD FORCE TO TOP TO PREVENT INJURY\*\*\*

\*\*\* MACDERMID DESIGN IS NOT RESPONSIBLE FOR ANY DAMAGE OR FAILURE RESULTING FROM IMPROPER INSTALLATION\*\*\*

## DISCLAIMER

This product is warrantied against manufacturer defects only. Any claim against a defect must be made within 7 days of receipt. Please visit our website [www.macdesignltd.com/return-policy](http://www.macdesignltd.com/return-policy) for more information.

## INSTALLATION

1. For better installation, clean the area around the window. It may be easier for you to organize your molle layout before installing the panel to the car.
2. Remove the factory tie down points on the rail. (Figure 1)

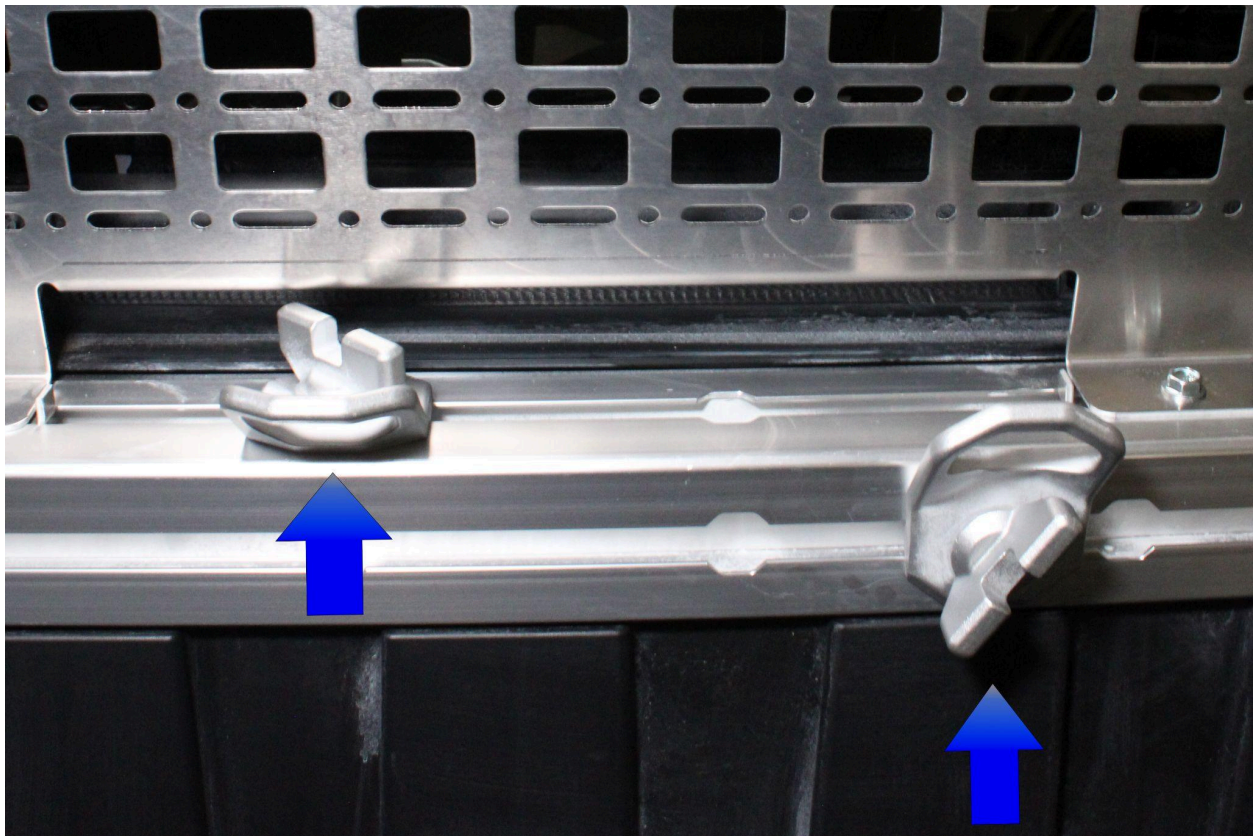


Figure 1

3. Next place the panel over the correct window, lining up all the holes so they are centered. Using the supplied hardware with the t-nut fastened almost all the way down, slide it into position on the top rail and twist to slightly tighten it. (Figure 2)

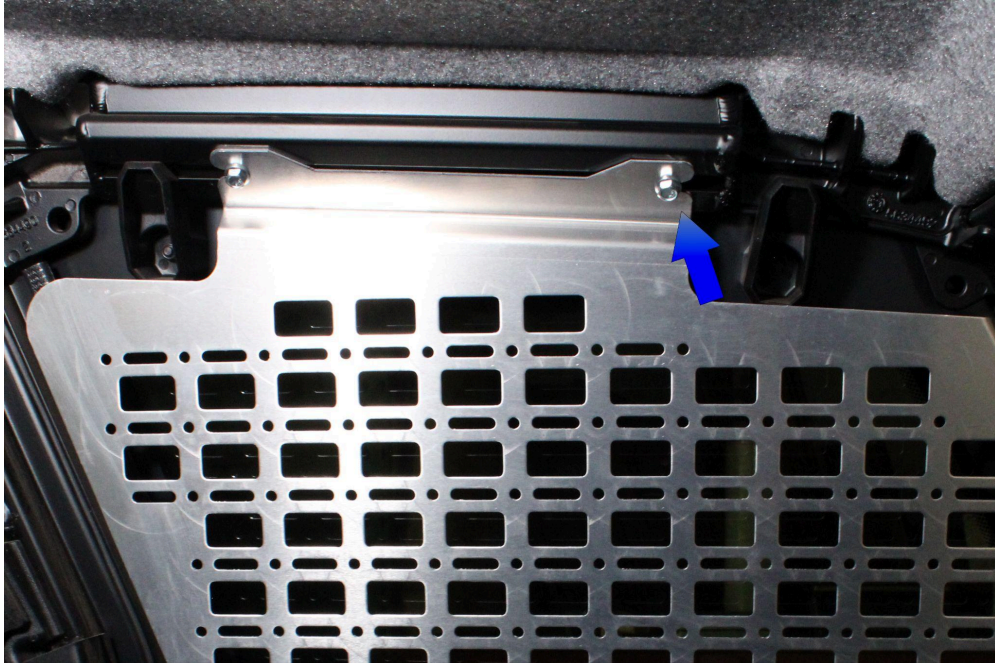


Figure 2


4. Then fasten the next bolt and t-nut on the rail at the rear of the car. Twist to slightly tighten it. (Figure 3)



Figure 3




5. Now that the panel is positioned correctly, install the last two bolts and t-nuts in the remaining slots on the upper and back rails. (Figure 4)

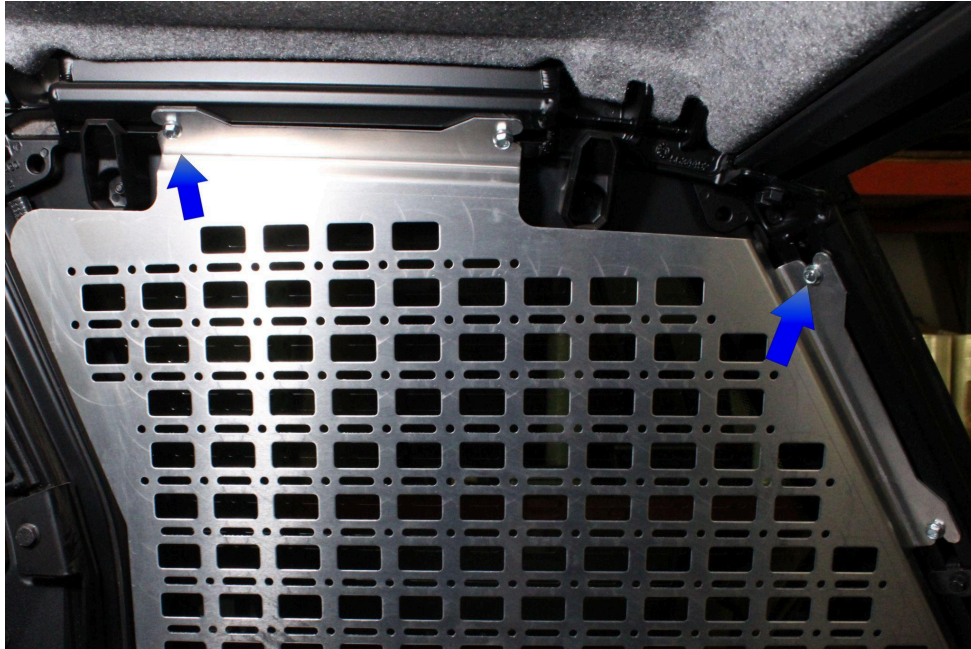

**Figure 4**

6. For the bottom mounting, the supplied hardware has a tab for you to hold onto as you slide it into the rail and under the panel holding it in place while you screw in the bolt. Repeat on the other side. (Figure 5)

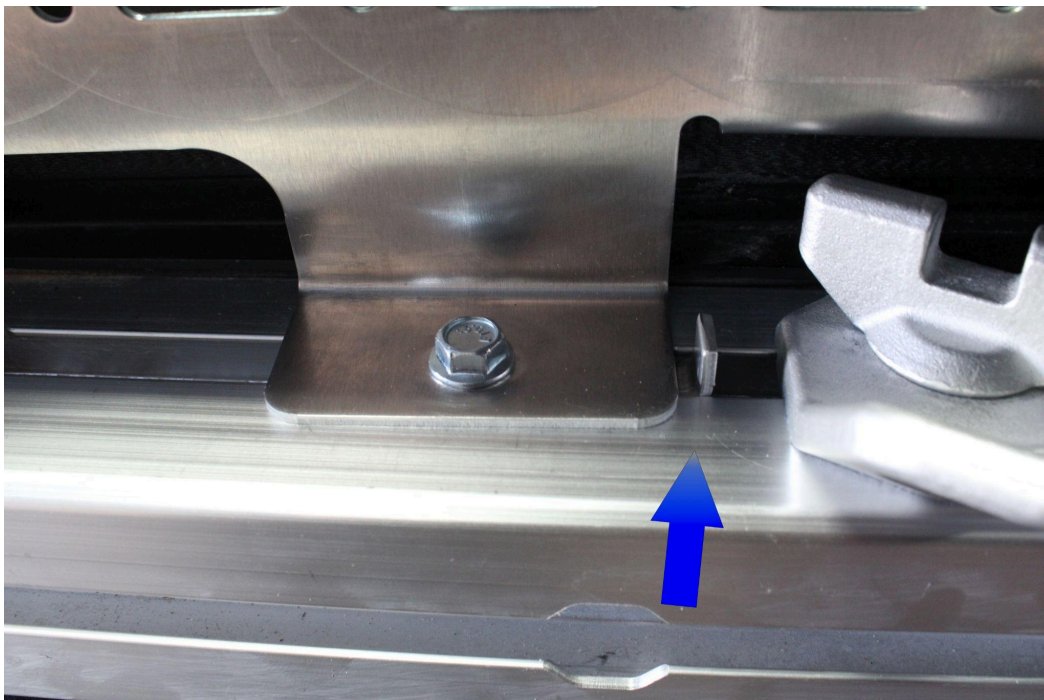

**Figure 5**

7. Now go through and tighten all the bolts snug so that the panel is flush with the window.
8. Go out and enjoy your new mounting solution!