



**MacDermid
Design Ltd**

A FULL SERVICE METAL FABRICATION COMPANY

 www.macdesignltd.com

2650 E. Mohawk Lane, Suite 152, Phoenix, Arizona 85050
Phone: 602-482-7215 Email: info@macdesignltd.com

VEHICLE APPLICATION

- | | |
|---|---|
| <ul style="list-style-type: none">• 2024-2025 | <ul style="list-style-type: none">• RZR Xpedition ADV Ultimate 5• RZR Xpedition ADV Northstar 5• RZR Xpedition XP Ultimate 5• RZR Xpedition XP Northstar 5 |
|---|---|

HARDWARE INCLUDED

Factory Hardware

TOOL LIST

- T-30 Torx Bit

INSTALLATION NOTES

READ ALL INSTRUCTIONS FROM START TO FINISH BEFORE BEGINNING INSTALLATION. FAILURE TO DO SO MAY RESULT IN DAMAGE TO PRODUCT

LID OF STORAGE BOX IS SPRING LOADED FOR AN ADDITIONAL 75LBS. DO NOT OPEN LID UNLOADED WITHOUT APPLYING DOWNWARD FORCE TO TOP TO PREVENT INJURY

*** MACDERMID DESIGN IS NOT RESPONSIBLE FOR ANY DAMAGE OR FAILURE RESULTING FROM IMPROPER INSTALLATION***

DISCLAIMER

This product is warrantied against manufacturer defects only. Any claim against a defect must be made within 7 days of receipt. Please visit our website www.macdesignltd.com/return-policy for more information.

INSTALLATION

1. First left rear seats and wipe the area down. Then go ahead and remove the top four T-30 torx bolts on both sides of the 60/40 split. It may be easier for you to organize your molle layout before installing the panel to the car. (Figure 1 and 2)



Figure 1



Figure 2

2. Next grab the panel and position it in place so all the holes line up

3. Once everything is lined up take the factory T-30 torx bolts and reinstall them into the hole through the panel. (Figure 3 and 4)

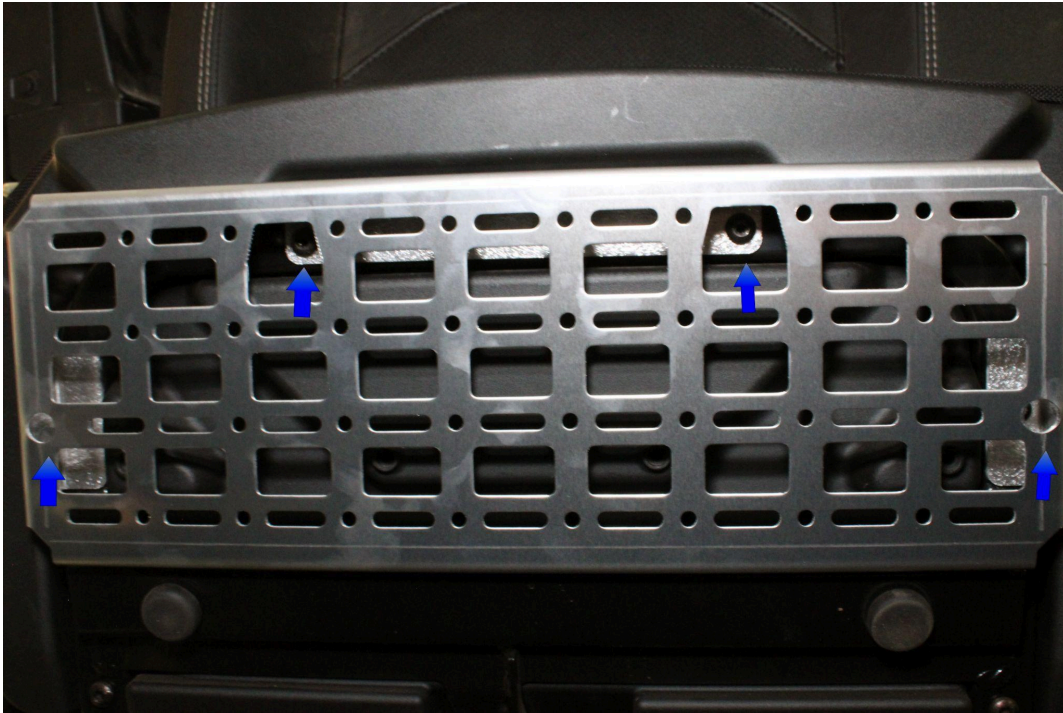


Figure 3



Figure 4