



**MacDermid
Design Ltd**

A FULL SERVICE METAL FABRICATION COMPANY

 www.macdesignltd.com

2650 E. Mohawk Lane, Suite 152, Phoenix, Arizona 85050
Phone: 602-482-7215 Email: info@macdesignltd.com

VEHICLE APPLICATION

<ul style="list-style-type: none">• 2019-2023	<ul style="list-style-type: none">• Honda Talon 1000• Honda Talon 1000-4
---	---

HARDWARE INCLUDED


(2) Bed Washer Plate	(6) M6 Flange Lock Nut
(6) M6-1 x 20 Flange Bolt	(4) M6-1 x 30 Flange Bolt
(2) Aluminum Washer Large	(2) Aluminum Washer Small
(4) $\frac{3}{8}$ -16 x $\frac{3}{4}$ Flange Bolt	(4) Tie Down Rings
(1) Set Of Keys For Latches	

TOOL LIST

<ul style="list-style-type: none">• 10mm Socket	<ul style="list-style-type: none">• 10mm Open End Wrench
<ul style="list-style-type: none">• 5/16" Drill Bit	<ul style="list-style-type: none">• 14mm Socket


Parts List

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	510-STSB-R1-09D	MOUNT BRKT, DRIVER SIDE	1
2	95735A221	M6-1 x 20 JIS FLANGE BOLT	3
3	510-STSB-R1-12	BED WASHER PLATE	1
4	92461A300	M6 - Steel Nylon-Insert Flange Locknut	3
5	84614-S06-000	HOOK - [FACTORY PART REUSE]	2
6	95735A231	M6-1 x 30 JIS FLANGE BOLT	2
8	510-STSB-R1-10	ALUMINUM WASHER, LG	1
9	510-STSB-R1-11	ALUMINUM WASHER, SM	1

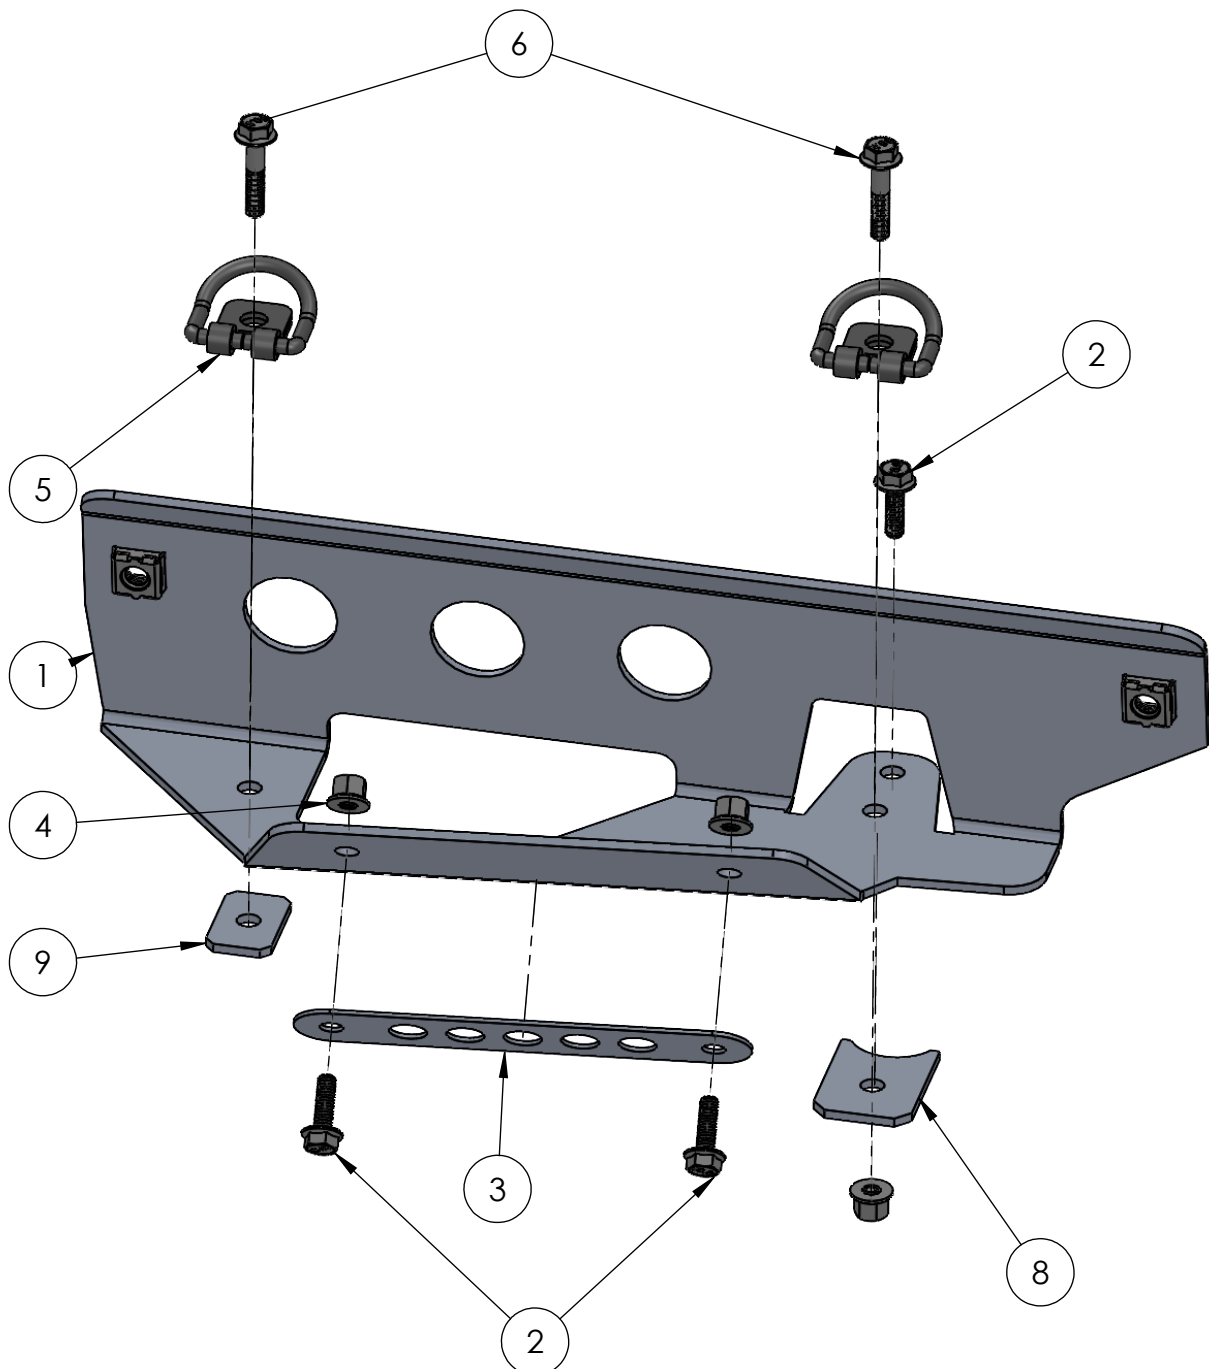

INSTALLATION

1. Clean the bed area before installing.
2. Remove the factory D-rings from the bed.

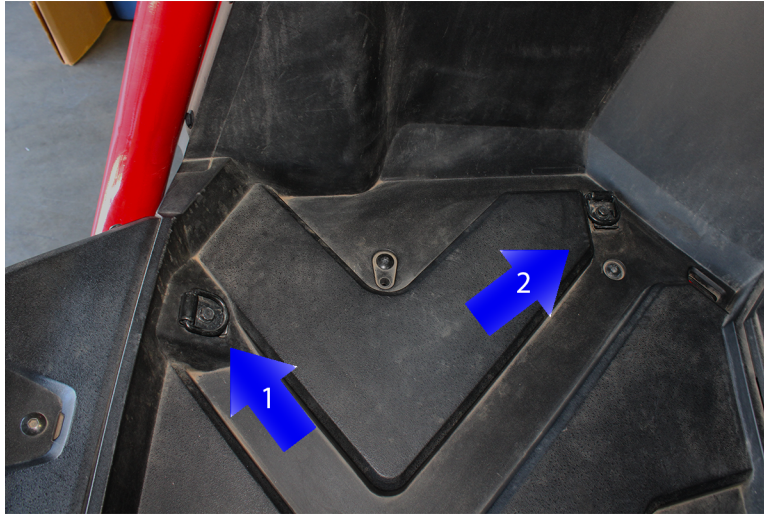

3. Reinstall the factory bolt that held the Rear D-ring at position 1 in place.
4. Remove the factory allen head bolt



5. Use 2 of the supplied 6mm bolts to hold the Driver Side mounting bracket in place. Mark the 3 remaining holes to be drilled.



6. Remove the Driver Side mounting bracket. Use a 5/16" drill bit to drill the three mounting holes you marked in step 5



7. Place Aluminum Washer,SM in forward rectangle mounting hole recess
See BOM, Item 9

8. Install the Driver Side mounting bracket in place using the supplied M6 x 30 bolts in the D-Ring mount locations. See Fig.5 for bolt, nut and washer locations.



9. Use the 3 supplied M6 x 20 bolts in the remaining mounting holes.
See BOM
10. Install Aluminum bed washer plate and two M6 lock nuts.



11. Install Aluminum Washer, LG and M6 lock nut.



12. Repeat steps 2-11 for Passenger Side Mounting Bracket.

13. With your mounting brackets fully installed, you can drop your storage box in place. Use the four 3/8 Flange bolts on the inside to secure the storage box to the mounting brackets.



14. Your install is now complete and you can enjoy your new storage space!